SCANSONIC

SKY

DAB+ RADIO

USER MANUAL
MODE D'EMPLOI
BEDIENUNGSANLEITUNG
INSTRUCTIEHANDLEIDING
BETJENINGSVEJLEDNING
BRUKSANVISNING
KÄYTTÖOHJE
ISTRUZIONI PER L'USO
MANUAL DEL USUARIO
MANUAL DO UTILIZADOR

Contents

02 CONTENTS
03 INFORMATION
04 FRONT/REAR PANEL
05 FRONT/REAR PANEL OVERVIEW
06 TOP PANEL OVERVIEW
07 BATTERY COMPARTMENT
08 CONNECTING YOUR RADIO
08 OPERATING YOUR RADIO - DAB
09 SELECTING A STATION - DAB
09 INFORMATION SERVICES - DAB
10 OPERATING YOUR RADIO - FM
10 DISPLAY MODES - FM
11 AUX MODE, CONNECT YOUR IPOD
11 MUTE AND SNOOZE FUNCTION
11 SETTING THE ALARM
12 SLEEP TIMER
12 MANUAL TUNING, RESET AND DISPLAY FUNCTIONS
13 SPECIFICATIONS

Information

Congratulations on your new radio.
Please take a moment to read this manual.
Enjoy

Safety instructions
Please store this instruction manual for future reference.

- Place the unit on a solid surface
- Do not expose Scansonic SKY to high humidity, direct sunlight, dirt, heavy vibration or extreme temperatures.
- Do not open the cabinet. Only qualified technicians are allowed to clean this Scansonic radio internal parts.
- If service or repair is required, this must also be done by qualified technicians.
- Use a duster or a slightly damp, soft and non-fluffy rag to clean the cabinet. Do not use corrosive or strong cleaning agents.
- Make sure no liquids or moisture penetrates the radio during the cleaning. Unplug the radio before cleaning it.

Unplug the radio in following cases:

- Foreign objects or liquids has penetrated the radio
- The radio cannot be operated properly.
- The cabinet has been damaged.
- The mains plug or the mains cable is defective.
- If the radio is not to be used for a long time.

Disclaimer
Despite our best efforts we cannot guarantee that the technical data indicated are correct, complete and updated. We, Scansonic, reserve the right to make technical changes without notice.

Front panel

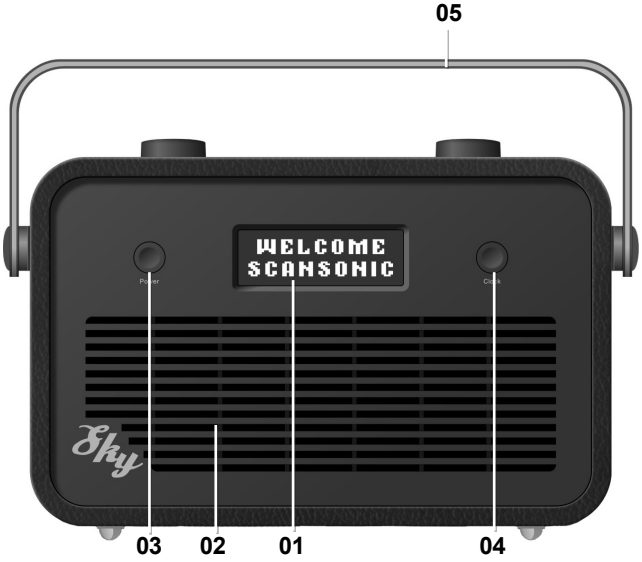

Rear panel

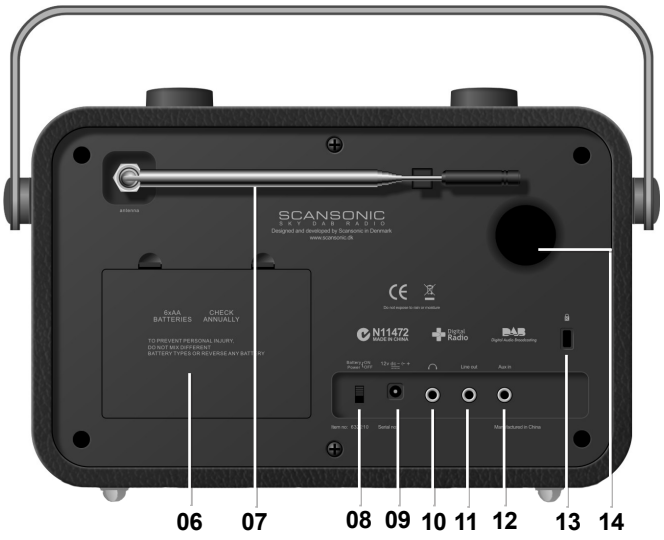

01 Display	OLED display is showing all information on the radio
02 Speaker	3" fullrange loudspeaker
03 Power	Press to turn on and off the radio
04 Clock	Push Clock button to get into clock menu, choose format and you will be able to choose between 12H or 24H. Choose Time and you will be able to set the time. Use the Select knob to navigate in Clock menu.
05 Handle	Metal handle for carrying the radio.
06 Battery compartment	The Scansonic SKY radio has battery compartment for 6 x AA batteries. If you use rechargable batteries the Scansonic SKY radio has charging function. You simply switch the on/off switch to On to charge the batteries. If you use NON rechargable batteries you must not use this function.
07 Antenna	The Scansonic SKY DAB+ comes with a telescope antenna. To improve DAB/FM reception, adjust the antenna for best reception. The telescope antenna can be detached (tool included in giftbox) and a 75-ohm coaxial cable or outdoor antenna can be connected to this connector.
08 Switch	Switch for choosing battery power. Choose On and the radio will run on the batteries and you will be able to use your Scansonic SKY radio without mains power adaptor inserted. (i.e outdoor)
09 12v DC	Use this input to connect the Scansonic SKY DAB+ DC power supply.
10 Headphones	Connect a separate stereoheadset to this input to listen to the radio with headset. Inserting a headset will turn off the main speaker
11 Line out	Scansonic SKY DAB+ can be used as a separate tuner by connecting it from the line out to an amplifier. Use 3.5mm jack to connect radio to amplifier.
12 Aux in	Connect a stereo or mono audio source (like iPod, MP3-player, TV or CD-player) to this stereo input. Use 3.5mm jack to connect devices to the radio.
13 Kensington lock	Use with Kensington lock system for theft protection.
14 Bassreflex porttube	Bass reflex port tube for better sound quality.

Antenna tool, see point 07

Top panel

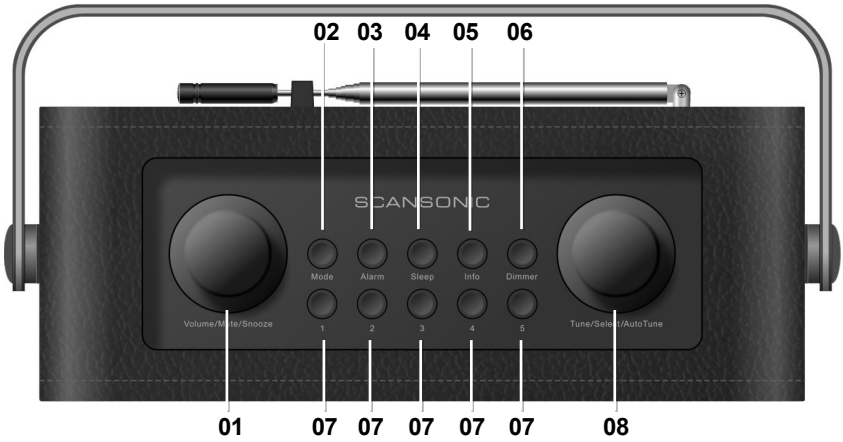

01VOLUME/MUTE/SNOOZE:
Turn to adjust the volume. Push the knob to mute the radio when power is on. Push the knob to Snooze 5 minutes when Alarm is on.

02MODE:
Push the button to change mode. Choose between FM / AM / AUX

03ALARM:
See page 11 for information about setting the alarm.

04SLEEP:
See page 12 for information about setting the sleep timer.

05INFO:
See page 12 for information about using the info button.

06DIMMER:
Push to dim the display on the SKY radio. There are 3 steps.

07PRESETS:
Press and hold the number buttons 1 - 5 for setting the presets. Push number buttons 1 - 5 to choose the preset stations.

08TUNE/SELECT/AUTOTUNE:
Turn the knob to choose station. Press and hold to start full scan. The knob is also used as Select knob.

Rear panel

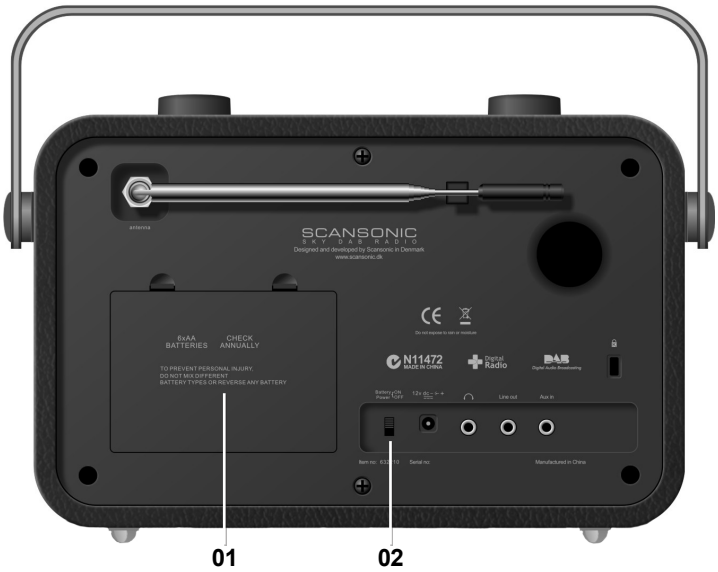

01BATTERY COMPARTMENT:
The Scansonic SKY radio has battery compartment for 6 x AA batteries. If you use rechargable batteries the Scansonic SKY radio has charging function. You simply switch the on/off switch to On to charge the batteries. If you use NON rechargable batteries you must not use this function.

WARNING! Do not attempt to charge NON rechargable batteries. Only use same type of batteries.
Take care to ensure all batteries are inserted with the correct polarity as shown inside the battery compartment.

02SWITCH:
Switch for choosing battery power. Choose On and the radio will run on the batteries and you will be able to use your Scansonic SKY radio without mains power adaptor inserted. (i.e outdoor)

Connecting your radio

01 Your radio is supplied with a mains adapter.

02 Place your radio on a flat surface

03 Insert the mains adapter plug into the DC socket (page 4, point 09) on the back of your radio

04 Plug the mains adapter into the 230 volts mains socket outlet

Important:
The mains adapter should be disconnected from the mains supply and the radio when not in use for longer period. The mains adapter is used as the means of connecting the radio to the mains supply, do not connect the radio to the mains outlet socket in any other way.

Operating your radio - DAB

01 Carefully extend the telescopic antenna.

02 Press the ON/OFF button to switch on radio, the radio will come into DAB mode automatically.

03 First time the radio is used a QUICK SCAN will be carried out, if the radio has been used before the last used station will be selected.

04 For a FULL SCAN press TUNE/SELECT/AUTOTUNE button 2 seconds – new stations may become available and a full scan is recommended regularly.

05 When scanning is complete the display indicate the number of found stations.

06 Press and hold 1-5 buttons to save favourite stations.

07 SIGNAL N/A in display is shown because of weak station signal or antenna removed.

08 If no stations are found after scanning the display will show NO STATIONS AVAILABLE and it is nescessary to relocate the radio to a position giving better reception, or connect the radio to your house antenna.

Selecting a station - DAB

01 The display show the name of the station selected.

02 Turn the SELECT KNOB to scroll the station list and find next station.

03 Press SELECT KNOB to select the desired station.

Information services - DAB

Your radio has seven different modes which can be selected by pressing the INFO button.

01 Signal strength	display shows a graph of the signal strength for the selected station
02 Date	display shows the current date and time
03 Genre	display the type of the selected station; Pop, Rock, News, Jazz etc.
04 Data speed	display the digital bit rate and mono/stereo of selected station
05 Radio text	display text messages such as artist, next artist, station ads etc
06 Station frequency	display the frequency of the selected station
07 Station provider	display the name of broadcaster to which the DAB station belongs to

Operating your radio - FM

01 Carefully extend the telescopic antenna.

02 Press ON/OFF to power on the radio (note that the radio automatically starts in DAB mode).

03 Press MODE button to select FM mode.

04 Turn TUNE button to the right and then press 2 seconds to automatically scan upwards.

05 Turn TUNE button to the left and then press 2 seconds to automatically scan downwards.

06 Turn the TUNE/SELECT knob to tune and adjust the frequency manually, steps 0,05MHz

07 Press and hold 1-5 buttons to save favourite stations.

Display modes - FM

Your radio has five different modes which can be selected by pressing the INFO button.

01 Radiotext	display text messages such as artist, next artist, station ads etc
02 Date	display shows the current date and time
03 Genre	display the type of the selected station; Pop, Rock, News, Jazz etc.
04 Stereo/Mono	display shows the current status (stereo or mono)
05 Station name	display the name of the current station

Note that these FM display mode informations are only available when the radio is able to receive RDS information from the broadcaster.

AUX mode, connect your iPod

The radio has an auxiliary stereo input. This input can be used to connect an external source such as iPod, iPhone, MP-3 player and many others by using the enclosed 3,5mm minijack cable.

For connecting iPod, iPhone or MP-3 player connect the players output for headphones to this radios AUX input with the enclosed 3,5mm minijack cable.

Press MODE to select the AUX mode.

Mute and Snooze function

When the radio is operating in either DAB, FM or AUX mode, you can press VOLUME/MUTE/ SNOOZE button on top of radio to mute the radio – press again to escape the mute status.

When alarm is working press SNOOZE button to make the radio come to snooze status – alarm will sound again after 5 minutes.

Setting the alarm

The radios alarm lets you wake up to your desired radio station – or a buzz.

01 Press ALARM button to check the current setting of the alarm.

02 Press ALARM button for 2 seconds to start alarm setting

03 ON/OFF is now flashing – turn SELECT knob and press to select ON or OFF alarm function.

04 If alarm ON is selected, the HOUR/MINUTE is now flashing – turn and press SELECT knob to choose and select the desired hour and minute.

05 The source RADIO or BUZZ is now flashing – turn and press the SELECT knob to choose and select.

06 Press ALARM button to check the current setting of the alarm.

Sleep timer

The radio has a sleep timer function that allows your radio to shut off automatically after a selected number of minutes.

01 Press SLEEP button to check status of sleep function.

02 Press SLEEP button for 2 seconds to start sleep setting.

03 ON/OFF is now flashing – turn SELECT knob and press to select ON or OFF sleep function.

04 If sleep ON is selected, the MINUTE is now flashing – turn and press SELECT knob to choose and select the desired minutes.

05 Longest sleep time is 90 minutes, shortest sleep time is 15 minutes.

06 Press SLEEP button to check status of sleep function.

Manual tuning, system reset and advanced display functions

Use the INFO button to select advanced display functions such as system reset and manual tuning.

01 Press and hold the INFO button about 2 seconds to enter the advanced display mode.

02 Press SELECT knob to enter manual tuning.

03 Press INFO button again to reset the system – after reset a QUICK SCAN will start finding the stations.

04 Press INFO button again and the software version appear on the display – this is only for information and for your reference.

05 Press INFO button again and you will enter the normal INFO button functions.

Specifications

Band	DAB, DAB+ & FM
Output power	5 watts rms
Loudspeaker	3" full range
Antenna	FM and DAB telescopic, removeable
Power	DC 12volts
Inputs	DC 12 volts (for net adapter) AUX in – for iPod, iPhone etc
Outputs	Line out – for connecting to amplifier Headphones
Dimensions (HxWxD)	165 x 260 x 100mm

enjoy